



## **REBEL OFF ROAD BAK-PAX TAILGATE DELETE FOR JEEP WRANGLER JK AND JL**



**PLEASE READ ALL INSTALLATION INSTRUCTIONS CAREFULLY AND IN  
ENTIRETY PRIOR TO INSTALLING.**

**Approx. time required for installation: 1 hour**

### **TOOLS REQUIRED:**

**3/8" DRIVE RATCHET  
13MM SOCKET  
SHORT PHILLIPS HEAD SCREWDRIVER  
3/16" HEX KEY**

### **PARTS INCLUDED**

**QTY 1: BAK-PAX PLATE  
QTY 1: LICENSE PLATE MOUNT  
QTY 1: BACKUP CAMERA MOUNT  
QTY 1: REBEL TAG**

## **HARDWARE INCLUDED:**

**QTY 1: WING SCREW**

**QTY 3: M4-40 PHILLIPS SCREW**

**QTY 4: M10-32 NYLOCK NUT**

**QTY 1: M6-32 PHILLIPS SCREW**

**QTY 1: M6-32 NYLOCK NUT**


**QTY 4: M10-32 BLACK PHILLIPS SCREW**

**QTY 4: 5/16-18 HEX DRIVE SCREW**

### **Step 1:**

**Lay out the components and hardware on a clean surface for assembly.**


**Remove the factory spare tire, backup camera (if equipped) and spare tire mount. Do not discard the eight factory bolts that secure the factory spare tire mount to the tailgate. Remove the factory air vents from the tailgate.**

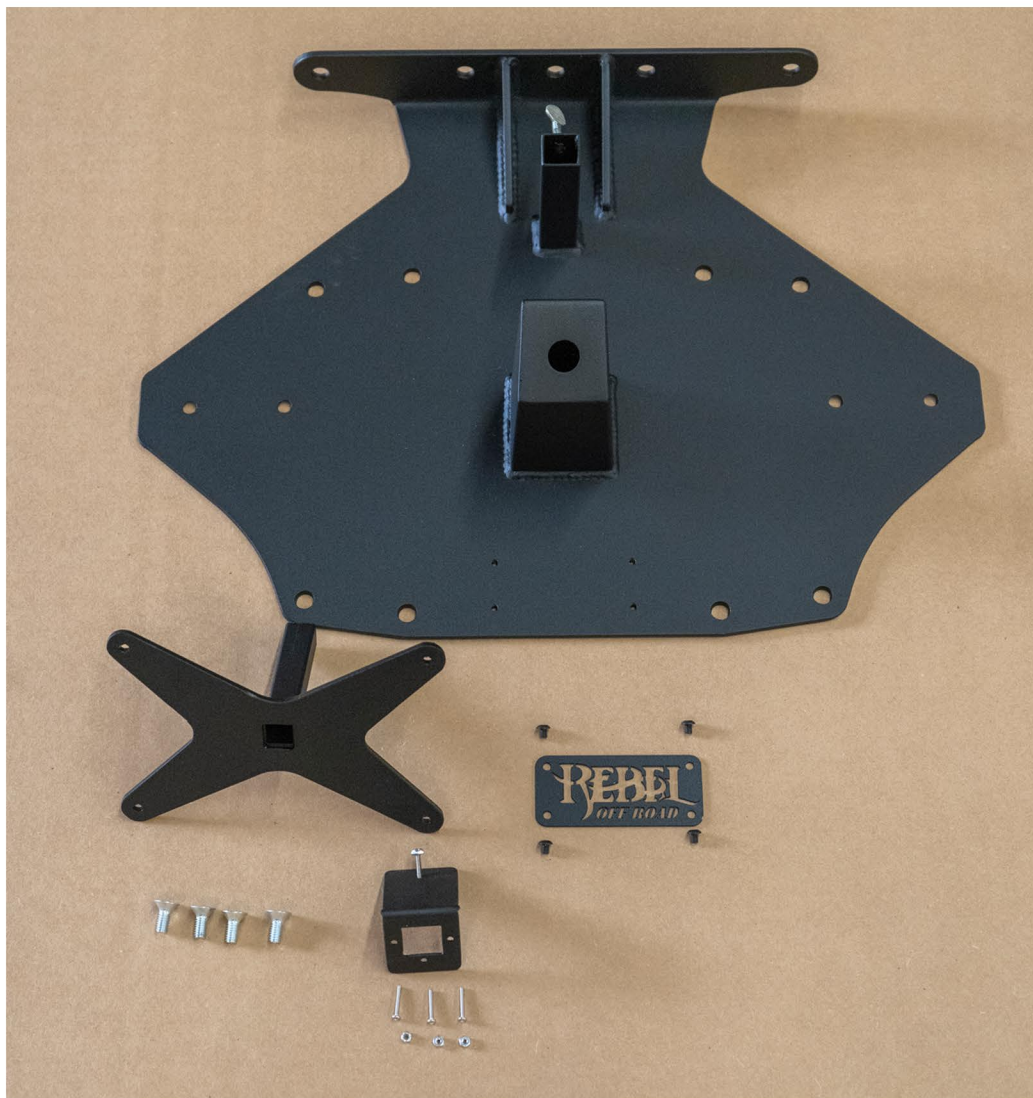

## Step 2:

If your Jeep has a factory backup camera, unplug the connector from the camera and reroute the wire through the large opening where the air vent was installed.

Now is the best time to route any wiring for your accessories, such as a third brake light, auxiliary lights, or antenna cables through the outer holes surrounding the air vent openings. Do not route any wiring through the threaded holes.

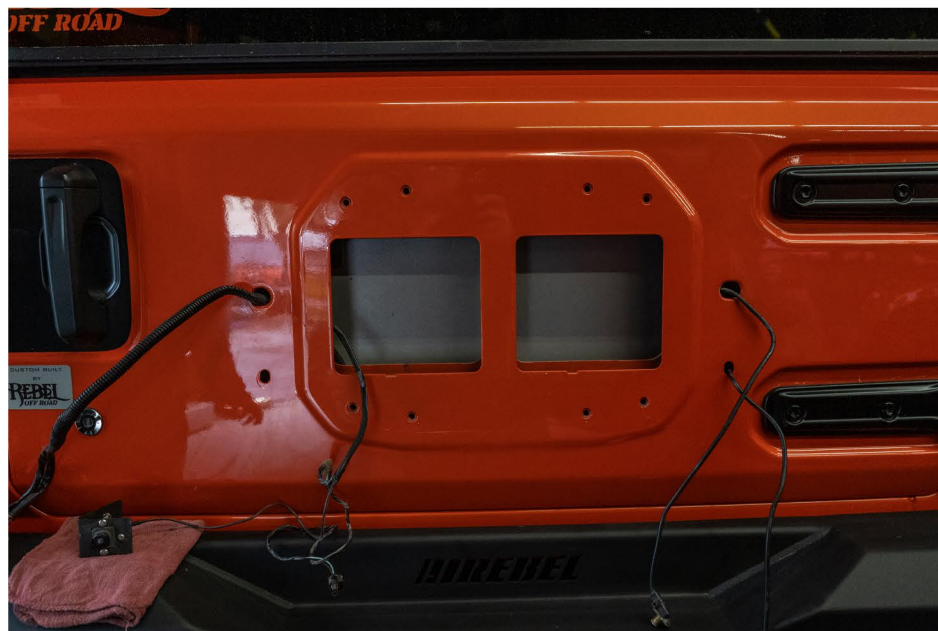



### **Step 3:**

**Using the supplied four black phillips head screws, secure the Rebel Off Road name plate to the Bak-Pax plate.**

**Next, secure your Rotopax mounts to the Bak-Pax plate using the four supplied hex drive flat head countersunk screws. Insert the screws through the back of the Bak-Pax plate and use a 3/16" hex key to tighten the Rotopax mounts down. You will use two screws per Rotopax mount.**






#### **Step 4:**

**If you are installing a Jeep JK kit, skip to step 5**

**Using the three supplied M4-40 Phillips screws and nylock nuts, secure the factory backup camera to the backup camera mount.**

**Slide the camera and camera mount into the camera perch through the back side of the Bak-Pax plate. Line up the remaining hole in the camera mount with the hole in the top of the camera perch. Secure the camera mount to the perch using the supplied single M6-32 x 3/4" Phillips screw and nylock nut.**

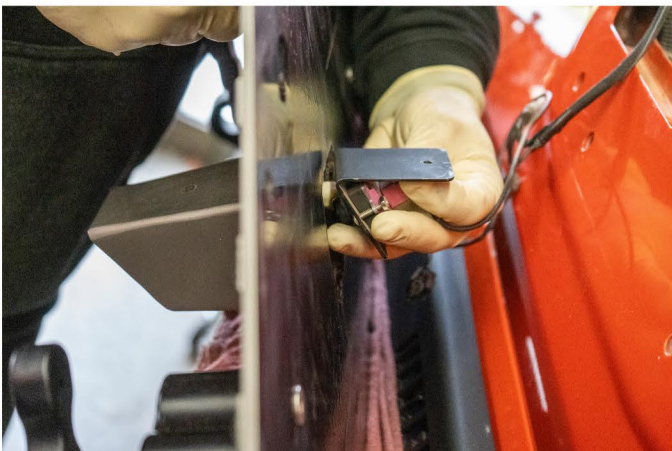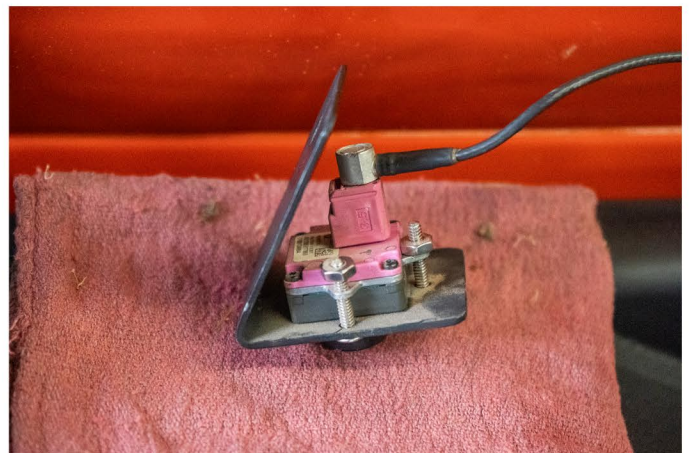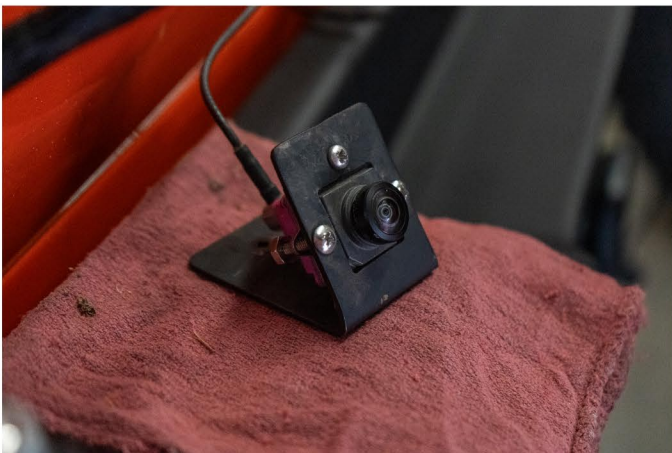



**Step 5:**

**Using the eight factory bolts you removed in step 1, mount the Bak-Pax plate to the tailgate. Finger tighten these bolts only. Ensure you haven't pinched any wiring or cables during the installation.**

**Continue to route any necessary wiring for your accessories or antennas as needed.**




### Step 6:

When all wiring is routed properly, use a 3/8" ratchet wrench and 13mm socket to tighten the factory bolts that hold the Bak-Pax plate to the tailgate. Tighten these bolts in a cross pattern so the plate sits evenly on the tailgate.

You may now install your Rotopax cans, auxiliary lighting and radio antennas as desired.

Slide the license plate mount into the square tube receiver and tighten down with the supplied wing bolt.

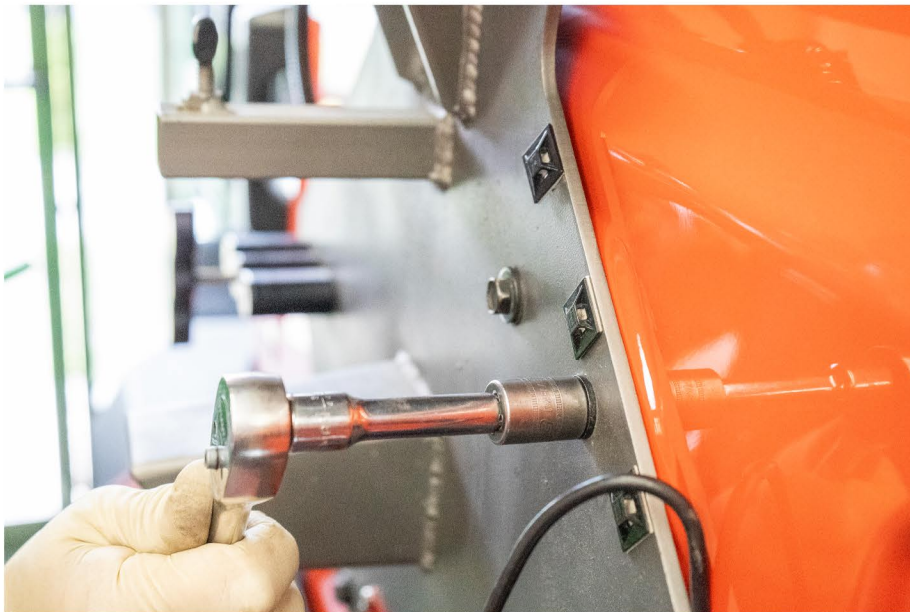



**We hope you enjoy your new Rebel Off Road  
Bak-Pax!**

**For a complete list of accessories we offer  
for your Bak-Pax system, visit us at  
[www.RebelOffRoad.com](http://www.RebelOffRoad.com)**



**Be sure to REVIEW this product on our  
website, and tag @rebeloffroad in any of  
your social media posts using your new  
Bak-Pax!**